

# **SHIM: A Language for Hardware/Software Integration**

**Stephen A. Edwards**

Department of Computer Science,  
Columbia University

[www.cs.columbia.edu/~sedwards](http://www.cs.columbia.edu/~sedwards)

[sedwards@cs.columbia.edu](mailto:sedwards@cs.columbia.edu)

# Definition


**shim** \ 'shim \ *n*

1 : a thin often tapered piece of material (as wood, metal, or stone) used to fill in space between things (as for support, leveling, or adjustment of fit).



2 : *Software/Hardware Integration Medium*, a language for describing hardware/software interfaces

# Target Architecture: HW/SW Systems

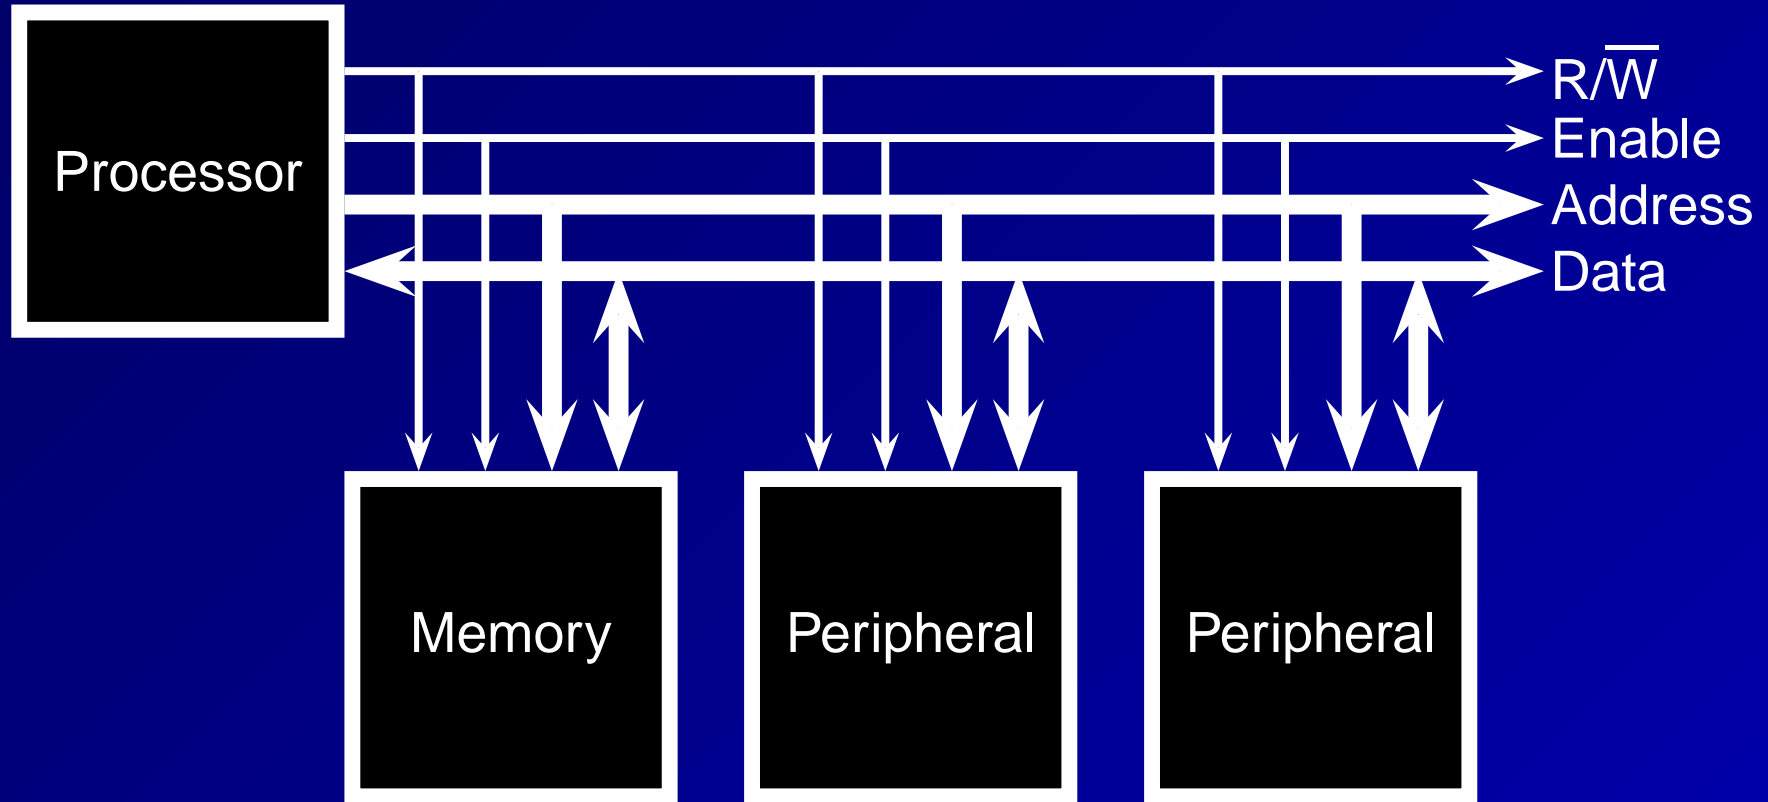

# A timer in SHIM

```
module timer {
    shared uint:32 counter; // Visible to HW and SW

    hw void count() { // Hardware process
        counter = counter + 1;
    }

    out void reset_timer() { // Software function
        counter = 0;
    }

    out uint get_time() { // Software function
        return counter;
    }
}
```

# Generated C header file *timer.h*

```
#ifndef _TIMER_H
#define _TIMER_H
extern void reset_timer(void);
extern unsigned int get_time(void);
#endif /* _TIMER_H */
```

# Generated C source file *timer.c*

```
#include "timer.h"
#include "xio.h"
#define IO_BASE 0xfeff0200
#define counter (IO_BASE + 0x0)

void reset_timer() {
    XIo_Out32(counter, 0);
}

unsigned int get_time() {
    return XIo_In32(counter);
}
```

# Generated VHDL source (excerpt)

```
signal counter : UNSIGNED(31 downto 0);
```

```
count : process(Clk)
```

```
begin
```

```
    if Clk'event and Clk = '1' then
```

```
        counter <= counter + 1;
```

```
        if cs1 = '1' and RNW = '0' then
```

```
            if offset = 0 then
```

```
                counter <= DBus;
```

```
            end if; end if; end if;
```

```
end process count;
```

```
read_shared_variables : process(Clk)
```

```
begin
```

```
    if Clk'event and Clk = '1' then
```

```
        if cs1 = '1' and RNW = '1' then
```

```
            DBus_out <= read_data;
```

```
        else DBus_out <= "0"; end if;
```

```
        if offset = 0 then
```

```
            read_data <= counter;
```

```
        end if; end if;
```

```
end process read_shared_variables;
```

# An I<sup>2</sup>C Bus Controller (Software)

```
shared out bool SCL;    // I2C clock
shared out bool SDA;    // I2C data out
shared out bool SDA_oe; // Output enable for data
shared bool SDA_data;   // I2C data in

void send(uint:8 byte) {
    SDA_oe = 0; delay();
    for (int i = 7 ; i >= 0 ; i = i - 1) {
        SDA = (byte & 0x80) >> 7; delay();
        SCL = 1; byte = byte << 1; delay();
        SCL = 0; delay();
    }
    SDA_oe = 1; delay();
    SCL = 1; delay();
    bool acknowledge_received = SDA_data;
    if (!acknowledge_received)
        xio.print("Acknowledge not received\r\n");
    delay();
    SCL = 0; delay();
}
```



# An I<sup>2</sup>C Bus Controller (Hardware)

```
stared uint:8 sreg;      // Send/receive shift register
shared uint:5 state;    // Controller state
shared bool ready;      // true => controller idling
shared uint:3 command;  // Command for the controller
shared const uint:3 IDLE    = 0; // Commands
shared const uint:3 SEND    = 2;
```

```
hw void controller() {
  const uint:5 IDLE    = 0;  const uint:5 SEND1 = 5;
  const uint:5 SEND2 = 6;  const uint:5 IDLE0  = 24;
  uint:3 bit_counter;
```

```
  if (reset) state = IDLE;
  if (i2c_clock) {
    ready = 0;
    switch (state) {
      case IDLE:
        ready = 1;
        switch (command) {
          case START:  state = START1;  break;
          case SEND:   state = SEND1;   break;
          case RECEIVE: state = RECV1;   break;
          case STOP:   state = STOP1;    break;
          default:     state = IDLE;     break;
        }
      }
    break;
  }
```

# An I<sup>2</sup>C Bus Controller (Hardware)

```
    case SEND1:
        SDA_oe = 0; bit_counter = 0; state = SEND2;
        break;
    case SEND2:
        SDA = sreg[7]; state = SEND3; break;
    case SEND3:
        SCL = 1; sreg = sreg << 1;
        bit_counter = bit_counter - 1; state = SEND4;
        break;
    case SEND4:
        SCL = 0; if (bit_counter == 0) state = SEND5;
        else state = SEND2; break;
    // Receive Acknowledge
    case SEND5:
        SDA_oe = 1; state = SEND6; break;
    case SEND6:
        SCL = 1; state = SEND7; break;
    case SEND7:
        acknowledge_received = SDA_in; state = SEND8;
    case SEND8:
        SCL = 0; state = IDLE0; break;
    case IDLE0:
        if (command == IDLE_BIT) state = IDLE;
        else state = IDLE0; break;
    }
}
}

void send(uint:8 byte) {
    sreg = byte;
    command = SEND_BIT; while (ready) ;
    command = IDLE_BIT; while (!ready) ;
}
```

# Results

Example	SHIM	C	VHDL
I <sup>2</sup> C Software (by hand)		259	133
I <sup>2</sup> C Software	171	175	136
I <sup>2</sup> C Bit-level	283	173	337
I <sup>2</sup> C Byte-level Receive	299	163	358
I <sup>2</sup> C Byte-level Send/Receive	323	116	344
Timer	15	20	98

# Under the hood

SHIM compiler: 3000 lines of OCAML

500 lines: interface synthesis for Xilinx/Microblaze/OPB

Most translation syntax-directed (no optimization)

Enumerate shared variables, assign addresses

Modify software R/Ws of shared variables

Add reads and write ports to hardware processes

# What's Next?

Problem: language is fundamentally nondeterministic

Timer illustrates problem: software runs at rate independent of hardware

Standard solution: simulate hardware in concert with cycle-accurate ISS

I used handshaking to make I<sup>2</sup>C example work reliably

What should the semantics be? I want correct-by-construction